

First, please carefully read the "IMPORTANT SAFETY INSTRUCTIONS" on the reverse side.

Thank you for your purchase of the Yamaha MA2120 power amplifier. Please read through this manual carefully before beginning use, so that you will be able to take full advantage of the device's various functions. After you have read the manual, keep it in a safe place.

- The illustrations as shown in this manual are for instructional purposes only.
- The company names and product names in this manual are the trademarks or registered trademarks of their respective companies.

Features

- Complies with the ENERGY STAR international standard for energy efficient products.
- Supports both high-impedance and low-impedance speaker connections.
- Mixing/Routing function allows you to mix various sources and to output to one stereo channel, or two mono channels. Source and volume zoning capability for two zones in mono connection.
- Equipped with an auto-wake function that turns the power on after detecting an input signal when in standby mode.
- Various digital signal processing and effects, including reverb, compressor, EQ, leveler, ducker and feedback suppressor.
- Built-in "Speaker EQ" that allows for tuning the sound quality to be perfect for use with Yamaha speakers.
- Remote controllable with up to two DCP control panels.

Accessories (Please confirm that all items are included)

- Power cord
- Euroblock plugs (6-pin x 3, 3-pin x 1, both with a 3.5mm pitch)
- Setup Guide
- Owner's Manual (this sheet)

About Manuals

Owner's Manual (this leaflet)

Explains about precautions, controls and functions on the panel, attaching Euroblock plugs, connecting speaker cables, and connecting external devices.

Setup Guide (separated)

Provides setup examples, explains settings to make after installation, and connecting control panels and remote controller.

ENERGY STAR Certification

This device complies with the ENERGY STAR international standard for energy efficient products.

It automatically enters into standby mode when no input signal is detected for 25 minutes in order to save power while not in use.

In addition, a highly efficient amplifier circuitry design has been adopted to reduce energy consumption while the device is in use.



Auto-Standby and Auto-Wake Functions


To reduce energy consumption, this device enters into standby mode when no input signal is detected for 25 minutes.

It is also equipped with an auto-wake function that automatically turns the power on when an input signal is detected while in standby mode. Even when the device has been put into standby mode by the auto-standby function, any microphone or BGM audio input will restore the power.


The auto-wake function is turned on by default. The auto-wake function can be turned on or off by changing the rear panel [SETUP] DIP switch setting. (Refer to "Controls and Functions.")

Setup Example


When multiple speakers are connected to the two zones: (MODE: MONO)

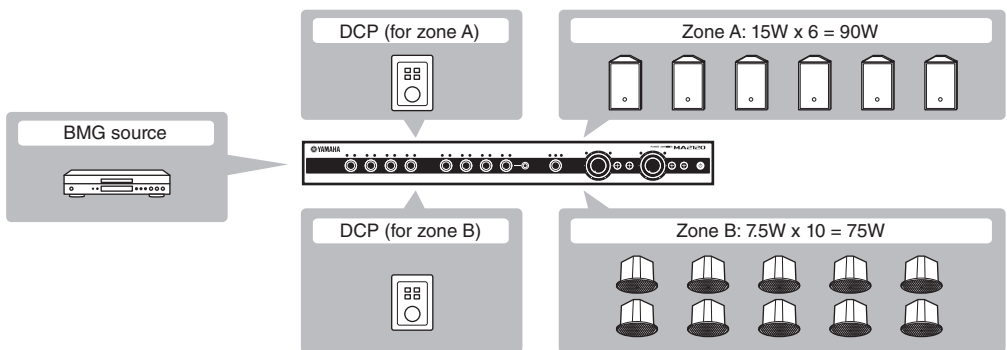

When two-channel stereo is used: (MODE: STEREO)

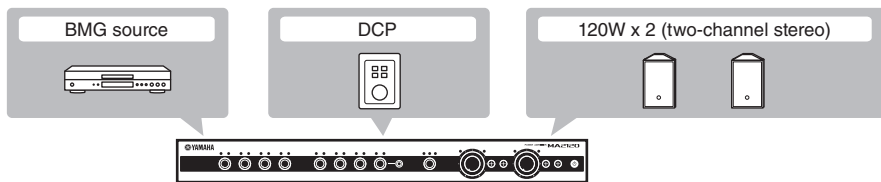

Front Panel

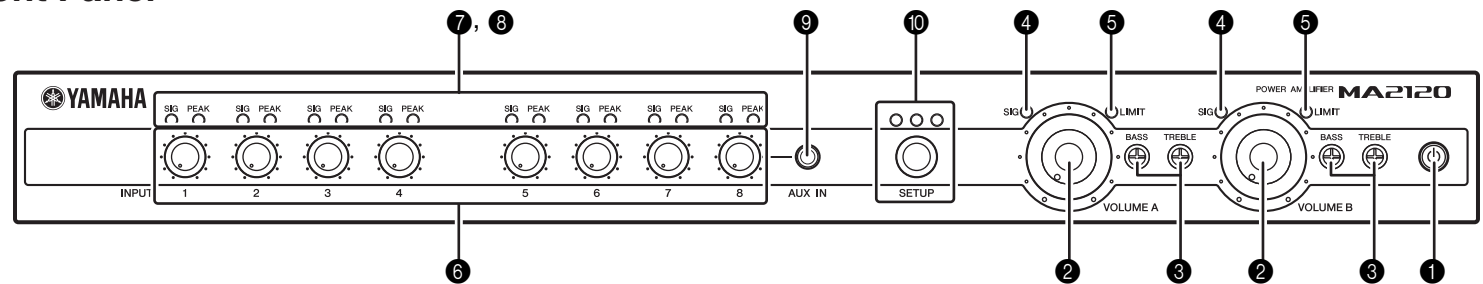

- [⏻] button (Standby/On)**
Switches the device mode between standby and on.
On: Press the [⏻] button when in standby mode. The button lights in green to indicate that the device is on.
Standby: Press and hold the [⏻] button for at least one second when the device is on. The button lights in orange to indicate that the device is in standby mode. The button lights in lime green for a few seconds while the status is switched between on and standby.
NOTE
 - The device automatically enters standby mode when no input signal is detected for 25 minutes. The rear panel DIP switch can be set to enable the auto-wake function that turns the power on upon detecting an input signal.
 - Rapidly turning the unit on and off in succession can cause it to malfunction. After turning the unit off, wait for about 6 seconds before turning it on again.
- [VOLUME A] and [VOLUME B] knobs**
Used to adjust [SPEAKER A] and [SPEAKER B] output levels.
- [BASS] and [TREBLE] controls**
Two-band equalizer used to adjust the tone of the output signal to [SPEAKER A] and [SPEAKER B]. They can be adjusted with a tool such as a screwdriver.
- [SIG] indicator**
Lights up when the output signal to [SPEAKER A] or [SPEAKER B] is -42dBFS (42dB lower than the maximum output) or higher.
- [LIMIT] indicator**
Lights up when the limiter that prevents excessive output to [SPEAKER A] and [SPEAKER B] compresses the signal more than 3dB, for example. Adjust the input and output levels as LIMIT indicators do not light.
- Input level knobs 1 - 8**
Adjusts the input levels for [INPUT 1] - [INPUT 8]. Turning to the right increases the input level. In usual mode, press the knob to blink the [SIG] indicator of the output which the pressed channel is assigned to. You can confirm the selected output by the [ROUTE] switch of the rear panel.
In setup mode, press the knob to select the function to adjust, or to select a channel for adjustment. For more information regarding setup mode, refer to the "Setup Guide".
- [INPUT SIG] indicators 1 - 8**
Light up when the [INPUT 1] - [INPUT 8] input signal levels exceed -40dBFS. Adjust the input levels to a point where these indicators light by the input level knobs.
- [INPUT PEAK] indicators 1 - 8**
Light up when the [INPUT 1] - [INPUT 8] input signal levels exceed -3dBFS.
- [AUX IN] jack**
Input jack of mini-stereo type (unbalanced input). Connect a stereo audio source such as portable audio players. The signal from the [AUX IN] jack mixes with the signal from the [INPUT] jack 8 in the same signal path.
- [SETUP] encoder/indicators 1 - 3**
Push encoders for the various inbuilt adjustment functions. Press and hold this button to enter setup mode. Indicators 1 - 3 show adjustment values for setup mode functions. For more information regarding setup mode, refer to the "Setup Guide".
- AC IN connector**
Connect the supplied power cord.

- Caution**
 - When connecting the power cord, connect the power cord to the connector and then plug it into an appropriate AC power outlet.
 - Before connecting or disconnecting the power cord, make sure that the device power is in standby mode.

- [SETUP] DIP switches**
Set the following functions of the device. The setting change will be applied after carrying out a power cycle by pressing the [⏻] button on the front panel. DIP switch setting combinations are shown as follows.

DIP switches 1/2: Panel lock
Set knobs and controls to be locked on the panel.

1	2	Setting
<input type="checkbox"/>	<input type="checkbox"/>	Panel lock off (All controls are enabled)
<input type="checkbox"/>	<input type="checkbox"/>	Locks the [SETUP] knob
<input type="checkbox"/>	<input type="checkbox"/>	Locks controls other than [VOLUME] knobs
<input type="checkbox"/>	<input type="checkbox"/>	Panel lock on (All controls are disabled)

DIP switches 3/4: Auto-wake
Enable the function where the device automatically turns on from standby mode upon detection of an input signal.


3	4	Setting
<input type="checkbox"/>	<input type="checkbox"/>	Auto-wake function on
<input type="checkbox"/>	<input type="checkbox"/>	Auto-wake function on. Only when the system is switched from AC off to standby mode due to insertion of the AC plug, or put into standby mode by the auto-standby function.
<input type="checkbox"/>	<input type="checkbox"/>	Auto-wake function off

NOTE The auto-wake function is completely disabled if the device has been put into standby mode through operation via the [REMOTE] connector.

Output Power (20msec Burst, THD+N=1%)	AMP MODE = 3Ω	100W x 2ch
	AMP MODE = 4Ω	120W x 2ch
	AMP MODE = 8Ω	100W x 2ch
	AMP MODE = 70V/120V	120W x 2ch
	AMP MODE = 100V/120V	120W x 2ch
	AMP MODE = 70V/200V	200W x 1ch
Amplifier type (Output circuitry) THD+N	LINE IN to SPEAKER OUT, Half power@1kHz AMP MODE = 3Ω, 4Ω, 8Ω	≤ 0.2%
	LINE IN to SPEAKER OUT, Half power@1kHz AMP MODE = 70V, 100V/120V	≤ 0.2%
THD+N	LINE IN to SPEAKER OUT, Half power@1kHz	≤ 0.2%
	AMP MODE = 70V, 100V/200V	≤ 0.2%

Controls and Functions

Rear Panel

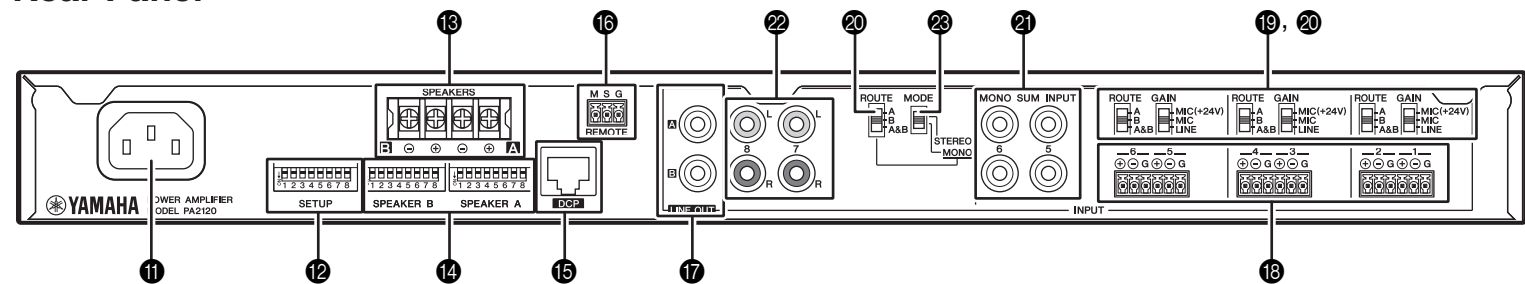

- DIP switch 5: A - B volume link**
Sets whether [SPEAKER A] and [SPEAKER B] volume levels are independently controlled. When the link function is on, use the [VOLUME A] knob to control the volume.

5	Setting
<input type="checkbox"/>	Link off ([SPEAKER A] and [SPEAKER B] volume levels are independently controlled)
<input type="checkbox"/>	Link on ([SPEAKER A] and [SPEAKER B] volume levels are both controlled via the [VOLUME A] knob)

NOTE If you turn on "A - B volume link" when the function to allow control of the line out volume A and B by the [VOLUME] knob is enabled in setup mode, LINE OUT A and B are also linked.

- DIP switch 6: DCP volume link**
Sets whether the [SPEAKERS] and [LINE OUT] jack output levels are linked, when changing the volume via the DCP.

6	Setting
<input type="checkbox"/>	Link off ([SPEAKERS] and [LINE OUT] jack volume levels are controlled separately)
<input type="checkbox"/>	Link on ([SPEAKERS] and [LINE OUT] jack output is controlled together)

NOTE When the link function is on, you can control the volume by using both of [SPEAKER] and [LINE OUT] on the control panel.

- DIP switches 7/8: Ducker**
Configure the settings for the Ducker function. This can mute the microphone input of other channels, and lower the volume of line input when signals are input to [INPUT 1] or [INPUT 3].

7	8	Setting
<input type="checkbox"/>	<input type="checkbox"/>	Ducker off
<input type="checkbox"/>	<input type="checkbox"/>	Ducker on when signals are input to [INPUT 1].
<input type="checkbox"/>	<input type="checkbox"/>	Ducker on when signals are input to [INPUT 3].
<input type="checkbox"/>	<input type="checkbox"/>	Ducker on when signals are input to [INPUT 1] or [INPUT 3]. If signals are input to both of them, [INPUT 1] is given precedence.

- [SPEAKERS] output terminals**
Barrier strip type speaker output connectors. Output connectors A and B are available. Refer to "Connecting Speaker Cables" for the installation instructions.

- [SPEAKER A] and [SPEAKER B] DIP switches**
Sets the amplifier mode and speaker EQ to match the type of speakers that are connected. The setting change will be applied after carrying out a power cycle by pressing the [⏻] button on the front panel. DIP switch setting combinations are shown as follows.

- DIP switches 1, 2, and 3: Amplifier mode setup**
Sets the amplifier output power and impedance.
- NOTICE**
If the DIP switch settings do not match the actual speaker impedance or input power rating, the device may have poor performance, and it may even lead to malfunction or sound dropout. Always ensure that appropriate settings are chosen.

1	2	3	Setting
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Amplifier output 120W, High-impedance 100V
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Amplifier output 120W, High-impedance 70V
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Amplifier output 200W, High-impedance 100V, Output only from [SPEAKERS] output terminal A
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Amplifier output 200W, High-impedance 70V, Output only from [SPEAKERS] output terminal A
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Amplifier output 100W, Low-impedance 8Ω or more
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Amplifier output 120W, Low-impedance from 4Ω to less than 8Ω
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Amplifier output 100W, Low-impedance from 3Ω to less than 4Ω
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Output muted

Specifications

Frequency Response	LINE IN to SPEAKER OUT, 50Hz to 20kHz@1W AMP MODE = 3Ω, 4Ω, 8Ω	0dB, -3.0dB, +1.0dB
	LINE IN to SPEAKER OUT, 90Hz to 20kHz@1W AMP MODE = 70V, 100V/120V	0dB, -3.0dB, +1.0dB
	LINE IN to SPEAKER OUT, 90Hz to 20kHz@1W AMP MODE = 70V, 100V/200W	0dB, -3.0dB, +1.0dB
	LINE IN to LINE OUT, 20Hz-20kHz	0dB, -2.5dB, +1.0dB
Crosstalk	MIC/LINE IN to other MIC/LINE IN	≤ -70dB
AC Power Requirement		100V, 120V, 230V-240V 50Hz/60Hz (*1)
Power Consumption	Standby, default setting AMP MODE = All	≤ 1W
	Idle AMP MODE = 3Ω, 4Ω, 8Ω	15W
	Idle AMP MODE = 70V, 100V	20W
	1/8 Output, Pink noise AMP MODE = 4Ω	60W
	1/8 Output, Pink noise AMP MODE = 70V/120V	60W

- DIP switches 4, 5, and 6: Speaker EQ**
Sets the speaker EQ that corrects the output signal to match the type of speakers that are connected.

4	5	6	Setting
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Off
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	High pass filter 150Hz
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Low pass filter 150Hz
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Low pass filter 200Hz
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Frequency correction tailored for Yamaha VXS series speakers
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Frequency correction tailored for the Yamaha VXS10S/VXS10ST subwoofer (45-150Hz)
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Frequency correction tailored for Yamaha VXC series speakers

- [DCP] connector**
Allows you to connect up to two DCP1V4S, DCP4S, or DCP4V4S Yamaha Digital Control Panels. For more information regarding the connection method, refer to "Connecting a Control Panel" in the "Setup Guide".
- [REMOTE] connector**
A Euroblock 3-pin plug can be inserted to remotely carry out control such as muting all channels or putting the device in and out of standby mode. For more information, refer to "Using the [REMOTE] Connector (Euroblock 3-pin)" in the "Setup Guide".

- [LINE OUT] jacks**
RCA type line output jacks (unbalanced output). The same signal that is output by the [SPEAKERS] jacks is output to these jacks. Output jacks A and B are available. The audio signal inputs for each [INPUT] connectors are passed through the built-in effects and mixed together. Then, the output is generated at the line level. These jacks can be used to connect an additional amplifier when the number of speakers is too much for this device to handle alone.
- [INPUT] connectors 1 - 6**
Euroblock 3-pin input connector (balanced). Connect the line output connector of a microphone or other external device.
- [GAIN] switches**
Set the gain for [INPUT] connectors 1 - 6. Each switch controls two channels.

Switch	Setting
MIC(+24V)	Microphone level, phantom power (+24V) on.
MIC	Microphone level, phantom power off.
LINE	Line level, phantom power off.

- Caution**
 - Only switch the phantom power on/off when the [VOLUME A] and [VOLUME B] knobs are turned all the way down.
 - Keep the phantom power turned off when it is not required, or if you wish to connect a non-supporting device.
 - Do not connect or disconnect the cable while phantom power is left on.
- NOTE**
 - When the [GAIN] switch is set to "MIC(+24V)" or "MIC", a noise gate (-72dBFS) is automatically applied to the input. This automatically reduces surrounding noise when the microphone is not being used. A noise gate is also applied to the [MONO SUM INPUT] when the [GAIN] switch for input 5 and 6 is set to "MIC(+24V)" or "MIC". Please set the [GAIN] switch to "LINE" when using the [MONO SUM INPUT] jacks.
 - When changing the [GAIN] switch during the power standby status, the change will only be reflected after the power is turned on. Therefore, the Auto-wake function may not work properly because of an absence of input level depending on the previous gain setting. Be sure to set the gain properly for the Auto-wake function to work properly.

- [ROUTE] switches**
Set the output destination for the signals from [INPUT] connectors 1 - 6. Each switch controls two channels. For [INPUT] jacks 7 and 8, these switch set the output destination only when the [MODE] switch is set to "MONO."

Switch	Setting
A	Output to A
B	Output to B
A&B	Output to A and B

- [MONO SUM INPUT] jacks 5 and 6**
RCA type line input jacks (unbalanced input). Two lines can be connected to [INPUT 5] and [INPUT 6]. All input signals are mixed to mono. All signals are mixed, even when there is simultaneous input via a Euroblock plug on [INPUT] connectors 5 and 6.
- [INPUT] jacks 7 and 8**
RCA type line input jacks (unbalanced input). Connect the line output connector of an external device.
- [MODE] switch**
Sets the method in which input signals from [INPUT 7] and [INPUT 8] are sent as output to the [SPEAKERS] or [LINE OUT].

Switch	L channel output destination	R channel output destination
STEREO	Zone A	Zone B
MONO	The L/R channel signals are mixed to mono. The resulting mono signal output destination depends on the [ROUTE] switch setting.	


ENERGY STAR	<ul style="list-style-type: none"> It automatically enters into standby mode when no input signal is detected for 25 minutes in order to save power while not in use. Amplifier efficiency: 44% and more. Less than 1W in standby.
Operating temperature	0°C to +40°C
Storage temperature	-20°C to +60°C
Dimensions (W x H x D, not including knob)	480 x 44 x 351mm (18.90 x 1.73 x 13.82 inch)
Net Weight	4.9kg
Included Accessories	AC power cord (2.0m) x1, 3.5mm Euroblock plug (6pin) x3, 3.5mm Euroblock plug (3pin) x1, Owner's Manual x1, Setup Guide x1
Optional accessories	Digital Control Panel (DCP1V4S-US/EU, DCP4V4S-US/EU, DCP4S-US/EU)

* The contents of this manual apply to the latest specifications as of the printing date. Since Yamaha makes continuous improvements to the product, this manual may not apply to the specifications of your particular product. To obtain the latest manual, access the Yamaha website then download the manual file. Since specifications, equipment or separately sold accessories may not be the same in every locale, please check with your Yamaha dealer.

European models
Purchaser/User Information specified in EN55103-2:2009.
Conforms to Environments: E1, E2, E3 and E4

Connections

Attaching Euroblock Plugs

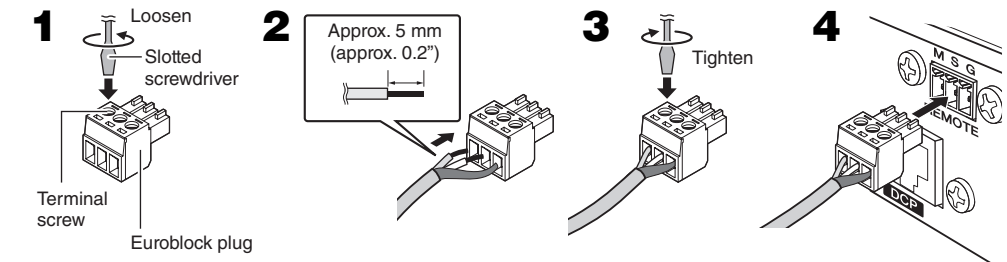

NOTE • You must use the supplied Euroblock plugs. If the plugs have been lost, please contact your Yamaha dealer.
 • To prepare the cable for attachment to a Euroblock connector, strip the wire as shown in the illustration using stranded wire to make connections. With a Euroblock connection, stranded wires may be prone to breakage because of metal fatigue due to the weight of the cable or due to vibration. When rack mounting your device, use a lacing bar when possible to bundle and fasten the cables.
 • Do not tin (solder) the exposed end.

- 1 Loosen terminal screws.
- 2 Insert cables.
- 3 Securely tighten terminal screws.
- 4 Insert the Euroblock plug into a terminal of this device.

Connecting Speaker Cables

The [SPEAKERS] output connectors on the rear panel are barrier strip type connectors. The connections are described below for two methods: using a spade lug and using a bare conductor.


CAUTION

- Ensure that load is not applied to the speaker cable.
- This device uses a BTL (Balanced Transformer-Less) connection method for the amplifier output. As the amplifier output is sent to the positive and negative connectors, any contact with other terminals or the device chassis may lead to malfunction.

NOTE Connect the cables so that the amplifier's "+" and "-" symbols match those of the speaker. If they are reversed, the phase will be reversed and the sound will not be output correctly.


When using a spade lug

Loosen the screw, wrap the spade lug all the way from below, and tighten the screw.

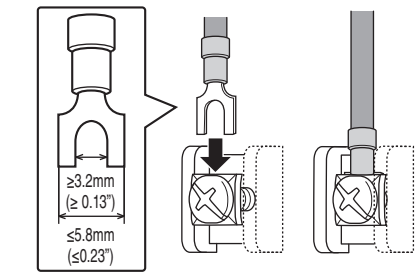

When using a bare conductor

Loosen the screw, wrap the conductor wire around the barrier strip terminal, and tighten the screw. Be sure that the bare wire does not touch the chassis.

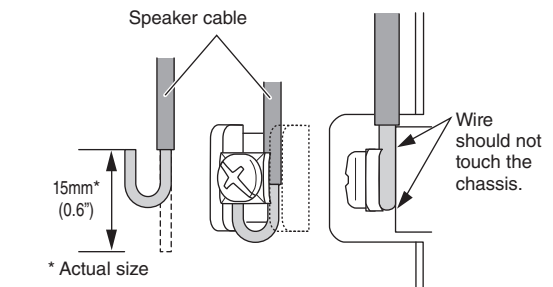


Connecting External Devices

Connect a BGM (background music) tuner, a CD player, a portable audio player, etc. to the stereo input jacks of this device. After finishing all connections, connect the power cord to an AC outlet.

Warning

When connecting the power cord to an AC outlet, an input signal will turn on the power of this device by the auto-wake function. To avoid unexpected loud sounds, be sure to connect microphones and external devices with the power off status.

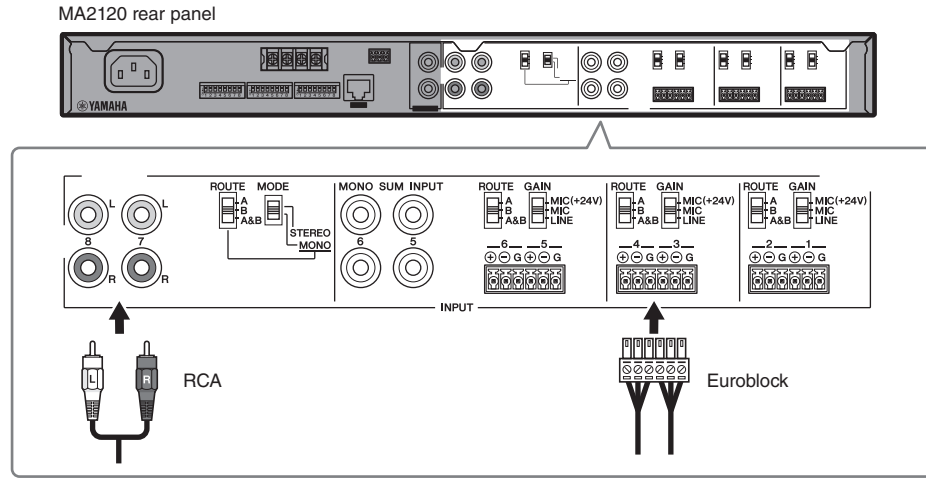

NOTE Refer to "Attaching Euroblock Plugs" for Euroblock plug installation.

Do not open

- This device contains no user-serviceable parts. Do not open the device or attempt to disassemble the internal parts or modify them in any way. If it should appear to be malfunctioning, discontinue use immediately and have it inspected by qualified Yamaha service personnel.

Water warning

- Do not expose the device to rain, use it near water or in damp or wet conditions, or place it in any containers (such as vases, bottles or glasses) containing liquids which might spill into any openings. If any liquid such as water seeps into the device, turn off the power immediately and unplug the power cord from the AC outlet. Then have the device inspected by qualified Yamaha service personnel.
- Never insert or remove an electric plug with wet hands.

Hearing loss

- Avoid setting all equalizer controls and volume controls to their maximum. Depending on the condition of the connected devices, doing so may result in feedback that can cause hearing loss and damage the speakers.
- Do not use speakers for a long period of time at a high or uncomfortable volume level, since this can cause permanent hearing loss. If you experience any hearing loss or ringing in the ears, consult a physician.
- When turning on the AC power in your audio system, always turn on the device LAST, to avoid hearing loss and speaker damage. When turning the power off, the device should be turned off FIRST for the same reason.

Fire warning

- Do not place any burning items or open flames near the device, since they may cause a fire.
- If you notice any abnormality
 - If any of the following problems occur, immediately turn off the power switch and disconnect the electric plug from the outlet.
 - The power cord or plug becomes dry and/or damaged.
 - Unusual smells or smoke are emitted.
 - Some object has been dropped into the device.
 - There is a sudden loss of sound during use of the device.
 - Cracks or other visible damage appear on the device.

Power supply/power cord

- When removing the electric plug from the device or an outlet, always hold the plug itself and not the cord. Pulling by the cord can damage it.

CAUTION

Always follow the basic precautions listed below to avoid the possibility of physical injury to you or others, or damage to the device or other property. These precautions include, but are not limited to, the following:

- **Do not touch any ventilation openings.** Install in accordance with the manufacturer's instructions.
- **Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.**
- **Do not defeat the safety purpose of the polarized or grounding-type plug.** A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- **Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.**

WARNING
TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPARATUS TO RAIN OR MOISTURE.

CAUTION
TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPARATUS TO RAIN OR MOISTURE.

CAUTION
TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPARATUS TO RAIN OR MOISTURE.

CAUTION
TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPARATUS TO RAIN OR MOISTURE.

CAUTION
TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPARATUS TO RAIN OR MOISTURE.

CAUTION
TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPARATUS TO RAIN OR MOISTURE.

CAUTION
TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPARATUS TO RAIN OR MOISTURE.

CAUTION
TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPARATUS TO RAIN OR MOISTURE.

CAUTION
TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPARATUS TO RAIN OR MOISTURE.

CAUTION
TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPARATUS TO RAIN OR MOISTURE.

CAUTION
TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPARATUS TO RAIN OR MOISTURE.

PRECAUTIONS

PLEASE READ CAREFULLY BEFORE PROCEEDING

Please keep this manual in a safe place for future reference.

WARNING

Always follow the basic precautions listed below to avoid the possibility of serious injury or even death from electrical shock, short-circuiting, damages, fire or other hazards. These precautions include, but are not limited to, the following:

- **Power supply/power cord**
 - Do not place the power cord near heat sources such as heaters or radiators, and do not excessively bend or otherwise damage the cord, place heavy objects on it, or place it in a position where anyone could walk on, trip over, or roll anything over it.
 - Only use the voltage specified as correct for the device. The required voltage is printed on the name plate of the device.
 - Use only the supplied power cord/plug.
 - If you intend to use the device in an area other than in the one you purchased, the included power cord may not be compatible. Please check with your Yamaha dealer.
 - Check the electric plug periodically and remove any dirt or dust which may have accumulated on it.
 - When setting up the device, make sure that the AC outlet you are using is easily accessible. If some trouble or malfunction occurs, immediately turn off the power switch and disconnect the plug from the outlet. Even when the power switch is turned off, as long as the power cord is not unplugged from the wall AC outlet, the device will not be disconnected from the power source. When installing in a rack, connect a power cut-off device additionally to power off the device handily.
 - Remove the electric plug from the outlet when the device is not to be used for extended periods of time, or during electrical storms.
 - Be sure to connect to an appropriate outlet with a protective grounding connection. Improper grounding can result in electrical shock, damage to the device(s), or even fire.

- **Do not open**
 - This device contains no user-serviceable parts. Do not open the device or attempt to disassemble the internal parts or modify them in any way. If it should appear to be malfunctioning, discontinue use immediately and have it inspected by qualified Yamaha service personnel.

- **Do not expose the device to rain, use it near water or in damp or wet conditions, or place it in any containers (such as vases, bottles or glasses) containing liquids which might spill into any openings.** If any liquid such as water seeps into the device, turn off the power immediately and unplug the power cord from the AC outlet. Then have the device inspected by qualified Yamaha service personnel.

- **Never insert or remove an electric plug with wet hands.**

- **Avoid setting all equalizer controls and volume controls to their maximum.** Depending on the condition of the connected devices, doing so may result in feedback that can cause hearing loss and damage the speakers.
- **Do not use speakers for a long period of time at a high or uncomfortable volume level, since this can cause permanent hearing loss.** If you experience any hearing loss or ringing in the ears, consult a physician.
- **When turning on the AC power in your audio system, always turn on the device LAST, to avoid hearing loss and speaker damage.** When turning the power off, the device should be turned off FIRST for the same reason.

- **Fire warning**
 - Do not place any burning items or open flames near the device, since they may cause a fire.
 - If you notice any abnormality
 - If any of the following problems occur, immediately turn off the power switch and disconnect the electric plug from the outlet.
 - The power cord or plug becomes dry and/or damaged.
 - Unusual smells or smoke are emitted.
 - Some object has been dropped into the device.
 - There is a sudden loss of sound during use of the device.
 - Cracks or other visible damage appear on the device.

- **When removing the electric plug from the device or an outlet, always hold the plug itself and not the cord.** Pulling by the cord can damage it.

- **CAUTION**
 - Always turn the power off when the device is not in use.
 - Even when the [I(O)] (Standby/On) switch is in standby status (power lamp is off/ display is off), electricity is still flowing to the instrument at the minimum level. When you are not using the instrument for a long time, make sure you unplug the power cord from the wall AC outlet.

- **Information**
 - The illustrations as shown in this manual are for instructional purposes only.
 - The company names and product names in this manual are the trademarks or registered trademarks of their respective companies.

- **DO NOT TOUCH ANY VENTILATION OPENINGS.** Install in accordance with the manufacturer's instructions.
- **DO NOT INSTALL NEAR ANY HEAT SOURCES SUCH AS RADIATORS, HEAT REGISTERS, STOVES, OR OTHER APPARATUS (INCLUDING AMPLIFIERS) THAT PRODUCE HEAT.**
- **DO NOT DEFEAT THE SAFETY PURPOSE OF THE POLARIZED OR GROUNDING-TYPE PLUG.** A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- **PROTECT THE POWER CORD FROM BEING WALKED ON OR PINCHED PARTICULARLY AT PLUGS, CONVENIENCE RECEPTACLES, AND THE POINT WHERE THEY EXIT FROM THE APPARATUS.**

- **CAUTION**
 - Always turn the power off when the device is not in use.
 - Even when the [I(O)] (Standby/On) switch is in standby status (power lamp is off/ display is off), electricity is still flowing to the instrument at the minimum level. When you are not using the instrument for a long time, make sure you unplug the power cord from the wall AC outlet.

- **Information**
 - The illustrations as shown in this manual are for instructional purposes only.
 - The company names and product names in this manual are the trademarks or registered trademarks of their respective companies.

- **DO NOT TOUCH ANY VENTILATION OPENINGS.** Install in accordance with the manufacturer's instructions.
- **DO NOT INSTALL NEAR ANY HEAT SOURCES SUCH AS RADIATORS, HEAT REGISTERS, STOVES, OR OTHER APPARATUS (INCLUDING AMPLIFIERS) THAT PRODUCE HEAT.**
- **DO NOT DEFEAT THE SAFETY PURPOSE OF THE POLARIZED OR GROUNDING-TYPE PLUG.** A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- **PROTECT THE POWER CORD FROM BEING WALKED ON OR PINCHED PARTICULARLY AT PLUGS, CONVENIENCE RECEPTACLES, AND THE POINT WHERE THEY EXIT FROM THE APPARATUS.**

- **CAUTION**
 - Always turn the power off when the device is not in use.
 - Even when the [I(O)] (Standby/On) switch is in standby status (power lamp is off/ display is off), electricity is still flowing to the instrument at the minimum level. When you are not using the instrument for a long time, make sure you unplug the power cord from the wall AC outlet.

- **Information**
 - The illustrations as shown in this manual are for instructional purposes only.
 - The company names and product names in this manual are the trademarks or registered trademarks of their respective companies.

- **DO NOT TOUCH ANY VENTILATION OPENINGS.** Install in accordance with the manufacturer's instructions.
- **DO NOT INSTALL NEAR ANY HEAT SOURCES SUCH AS RADIATORS, HEAT REGISTERS, STOVES, OR OTHER APPARATUS (INCLUDING AMPLIFIERS) THAT PRODUCE HEAT.**
- **DO NOT DEFEAT THE SAFETY PURPOSE OF THE POLARIZED OR GROUNDING-TYPE PLUG.** A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- **PROTECT THE POWER CORD FROM BEING WALKED ON OR PINCHED PARTICULARLY AT PLUGS, CONVENIENCE RECEPTACLES, AND THE POINT WHERE THEY EXIT FROM THE APPARATUS.**

- **CAUTION**
 - Always turn the power off when the device is not in use.
 - Even when the [I(O)] (Standby/On) switch is in standby status (power lamp is off/ display is off), electricity is still flowing to the instrument at the minimum level. When you are not using the instrument for a long time, make sure you unplug the power cord from the wall AC outlet.

- **Information**
 - The illustrations as shown in this manual are for instructional purposes only.
 - The company names and product names in this manual are the trademarks or registered trademarks of their respective companies.

- **DO NOT TOUCH ANY VENTILATION OPENINGS.** Install in accordance with the manufacturer's instructions.
- **DO NOT INSTALL NEAR ANY HEAT SOURCES SUCH AS RADIATORS, HEAT REGISTERS, STOVES, OR OTHER APPARATUS (INCLUDING AMPLIFIERS) THAT PRODUCE HEAT.**
- **DO NOT DEFEAT THE SAFETY PURPOSE OF THE POLARIZED OR GROUNDING-TYPE PLUG.** A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- **PROTECT THE POWER CORD FROM BEING WALKED ON OR PINCHED PARTICULARLY AT PLUGS, CONVENIENCE RECEPTACLES, AND THE POINT WHERE THEY EXIT FROM THE APPARATUS.**

- **CAUTION**
 - Always turn the power off when the device is not in use.
 - Even when the [I(O)] (Standby/On) switch is in standby status (power lamp is off/ display is off), electricity is still flowing to the instrument at the minimum level. When you are not using the instrument for a long time, make sure you unplug the power cord from the wall AC outlet.

- **Information**
 - The illustrations as shown in this manual are for instructional purposes only.
 - The company names and product names in this manual are the trademarks or registered trademarks of their respective companies.

- **DO NOT TOUCH ANY VENTILATION OPENINGS.** Install in accordance with the manufacturer's instructions.
- **DO NOT INSTALL NEAR ANY HEAT SOURCES SUCH AS RADIATORS, HEAT REGISTERS, STOVES, OR OTHER APPARATUS (INCLUDING AMPLIFIERS) THAT PRODUCE HEAT.**
- **DO NOT DEFEAT THE SAFETY PURPOSE OF THE POLARIZED OR GROUNDING-TYPE PLUG.** A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- **PROTECT THE POWER CORD FROM BEING WALKED ON OR PINCHED PARTICULARLY AT PLUGS, CONVENIENCE RECEPTACLES, AND THE POINT WHERE THEY EXIT FROM THE APPARATUS.**

- **CAUTION**
 - Always turn the power off when the device is not in use.
 - Even when the [I(O)] (Standby/On) switch is in standby status (power lamp is off/ display is off), electricity is still flowing to the instrument at the minimum level. When you are not using the instrument for a long time, make sure you unplug the power cord from the wall AC outlet.

- **Information**
 - The illustrations as shown in this manual are for instructional purposes only.
 - The company names and product names in this manual are the trademarks or registered trademarks of their respective companies.

- **DO NOT TOUCH ANY VENTILATION OPENINGS.** Install in accordance with the manufacturer's instructions.
- **DO NOT INSTALL NEAR ANY HEAT SOURCES SUCH AS RADIATORS, HEAT REGISTERS, STOVES, OR OTHER APPARATUS (INCLUDING AMPLIFIERS) THAT PRODUCE HEAT.**
- **DO NOT DEFEAT THE SAFETY PURPOSE OF THE POLARIZED OR GROUNDING-TYPE PLUG.** A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- **PROTECT THE POWER CORD FROM BEING WALKED ON OR PINCHED PARTICULARLY AT PLUGS, CONVENIENCE RECEPTACLES, AND THE POINT WHERE THEY EXIT FROM THE APPARATUS.**

- **CAUTION**
 - Always turn the power off when the device is not in use.
 - Even when the [I(O)] (Standby/On) switch is in standby status (power lamp is off/ display is off), electricity is still flowing to the instrument at the minimum level. When you are not using the instrument for a long time, make sure you unplug the power cord from the wall AC outlet.

- **Information**
 - The illustrations as shown in this manual are for instructional purposes only.
 - The company names and product names in this manual are the trademarks or registered trademarks of their respective companies.

- **DO NOT TOUCH ANY VENTILATION OPENINGS.** Install in accordance with the manufacturer's instructions.
- **DO NOT INSTALL NEAR ANY HEAT SOURCES SUCH AS RADIATORS, HEAT REGISTERS, STOVES, OR OTHER APPARATUS (INCLUDING AMPLIFIERS) THAT PRODUCE HEAT.**
- **DO NOT DEFEAT THE SAFETY PURPOSE OF THE POLARIZED OR GROUNDING-TYPE PLUG.** A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- **PROTECT THE POWER CORD FROM BEING WALKED ON OR PINCHED PARTICULARLY AT PLUGS, CONVENIENCE RECEPTACLES, AND THE POINT WHERE THEY EXIT FROM THE APPARATUS.**

- **CAUTION**
 - Always turn the power off when the device is not in use.
 - Even when the [I(O)] (Standby/On) switch is in standby status (power lamp is off/ display is off), electricity is still flowing to the instrument at the minimum level. When you are not using the instrument for a long time, make sure you unplug the power cord from the wall AC outlet.

- **Information**
 - The illustrations as shown in this manual are for instructional purposes only.
 - The company names and product names in this manual are the trademarks or registered trademarks of their respective companies.

Information for Users on Collection and Disposal of Old Equipment

This symbol on the products, packaging, and/or accompanying documents means that used electrical and electronic products should not be mixed with general household waste. For proper treatment, recovery and recycling of old products, please take them to applicable collection points, in accordance with your national legislation and the Directives 2002/96/EC.


By disposing of these products correctly, you will help to save valuable resources and prevent any potential negative effects on human health and the environment which could otherwise arise from inappropriate waste handling.

For more information about collection and recycling of old products, please contact your local municipality, your waste disposal service or the point of sale where you purchased the items.

[For business users in the European Union]
If you wish to discard electrical and electronic equipment, please contact your dealer or supplier for further information.

[Information on Disposal in other Countries outside the European Union]
This symbol is only valid in the European Union. If you wish to discard these items, please contact your local authorities or dealer and ask for the correct method of disposal.

(weee_en_01)

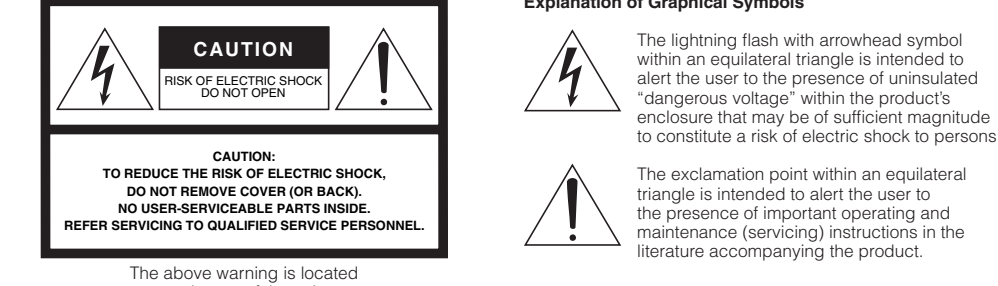

IMPORTANT SAFETY INSTRUCTIONS

- 1 Read these instructions.
- 2 Keep these instructions.
- 3 Heed all warnings.
- 4 Follow all instructions.
- 5 Do not use this apparatus near water.
- 6 Clean only with dry cloth.
- 7 Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 8 Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9 Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10 Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11 Only use attachments/accessories specified by the manufacturer.
- 12 Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- 13 Unplug this apparatus during lightning storms or when unused for long periods of time.
- 14 Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

WARNING
TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPARATUS TO RAIN OR MOISTURE.

(UL60065_03)

For details of products, please contact your nearest Yamaha representative or the authorized distributor listed below.

NORTH AMERICA
Yamaha Canada Music Ltd.
155 Milner Avenue, Toronto, Ontario, M1S 3R1, Canada
Tel: +1-416-298-1311

U.S.A.
Yamaha Corporation of America
6600 Orangethorpe Avenue, Buena Park, CA 90620, U.S.A.
Tel: +1-714-522-9011

CENTRAL & SOUTH AMERICA
Yamaha de Mexico, S.A. de C.V.
Av. Insurgentes Sur 1647 Piso 9, Col. San José Insurgentes, Delegación Benito Juárez, México, D.F., C.P. 03900
Tel: +52-55-5804-0600

BRAZIL
Yamaha Musical do Brasil Ltda.
Rua Fidêncio Ramos, 302 - Cj 52 e 54 - Torre B - Vila Olímpia - CEP 04551-010 - São Paulo/SP, Brazil
Tel: +55-11-3704-1377

ARGENTINA
Yamaha Music Latin America, S.A., Sucursal Argentina
Olga Cossetti 1553, Piso 4 Norte, Madero Este C1107CEK, Buenos Aires, Argentina
Tel: +54-11-4119-7000

VENEZUELA
Yamaha Musical de Venezuela, C.A.
AV. Manzanas, C.C. Manzanas Plaza, Piso 4, Oficina 0401, Baruta, Caracas, Venezuela
Tel: +58-212-943-1877

PANAMA AND OTHER LATIN AMERICAN COUNTRIES/ CARIBBEAN COUNTRIES
Yamaha Music Latin America, S.A.
Edif. Torre Banco General, Piso 7, Urbanización Marbella, Calle 47 y Aquilino de la Guardia, Ciudad de Panamá, República de Panamá
Tel: +507-269-5311

EUROPE
THE UNITED KINGDOM/IRELAND
Yamaha Music Europe GmbH (UK)
Sherbourne Drive, Tibrook, Milnes, Milnes, UK
Tel: +44-1908-366700

GERMANY
Yamaha Music Europe GmbH
Siemensstrasse 22-34, 25462 Rellingen, Germany
Tel: +49-4101-303-0

AFRICA
Yamaha Music Gulf FZE
JAFZA-16, Office 512, P.O. Box 17328, Jebel Ali FZE, Dubai, UAE
Tel: +971-4-801-1500

MIDDLE EAST
TURKEY
Yamaha Music Europe GmbH
Merkez Almanyası Türkiye İstanbul Subesi
Maslak Meydanı Sokak, Spring City Plaza Bagimsiz Bld. No:3, Şişli/İstanbul, Turkey
Tel: +90-212-999-8010

CZECH REPUBLIC/HUNGARY
ROMANIA/SLOVAKIA/SLOVENIA
Yamaha Music Europe GmbH
Branch Austria
Schöberlgasse 20, 1100 Wien, Austria
Tel: +43-1-60203900

POLAND/LITHUANIA/LATVIA/ESTONIA
Yamaha Music Europe GmbH
Sp. z o.o. Oddział w Polsce
ul. Wroclowska 14, 02-553 Warszawa, Poland
Tel: +48-22-880-68-88

OTHER EUROPEAN COUNTRIES
Yamaha Music Europe GmbH
Siemensstrasse 22-34, 25462 Rellingen, Germany
Tel: +49-4101-3030

HEAD OFFICE
Yamaha Corporation, Audio Products Sales and Marketing Division
10-1, Nakazawa-cho, Naka-ku, Hamamatsu, Japan 430-8650

ASIA
THE PEOPLE'S REPUBLIC OF CHINA
Yamaha Music & Electronics (China) Co., Ltd.
2F, Yunkedaohua, 1818 Xizhuohu, Jingnan-2, Shanghai, China
Tel: +86-400-651-7700

INDONESIA
Yamaha Music India Private Limited
Suzadze Building, Grand Floor, Tower A, Sector 7F, Gurgaon- Sohna Road, Gurgaon-122002, Haryana, India
Tel: +91-124-485-3300